
# Clean Oil Guide

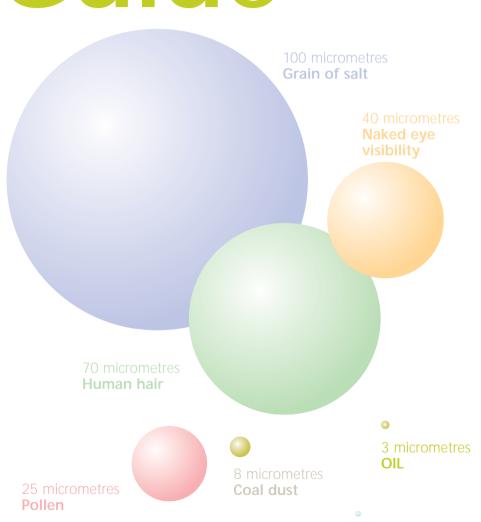

2 micrometres **Bacteria** 

#### Clean Oil Guide

Second Edition 2003 Published by: C.C. Jensen A/S Svendborg, Denmark. Layout: Novatesa, s.l. Barcelona, Spain. Revision layout, print: SvendborgTryk, Denmark.

#### Sources:

"Chemistry in electrical apparatuses" Lars Arvidson Västeras PetroleumKemi AB C.C. Jensen

#### **Contents**

Page	2		Introduction
	3		Wear and tear in oil systems
	4		Oil sampling
	4		Where to take an oil sample
	5		How to take an oil sample
	8		Oil sample analysis
	9		ISO standards
	10		NAS classes
	10		Evaluation of particle count
	11		Frequency of analysis
	12		Oil cleaning methods
	12		Filter types
	14		The surface filter
	15		The depth filter
	16		Basic filtration definitions
	16		Nominal filtration
	16		Absolute filtration
	16		ß <sub>x</sub> value
	17		Dirt capacity
	17		By-pass
	18		Installation methods
	18		Off-line filtration
	18		Full-flow
	20		Economy
	21		Ordering a filtration system
	22		Handling of oil and oil systems
	22		New oil in containers
	22		Oil in the system
	23	10	Recommendations for buying of
	23		Oil test certificates and test samplir
	23		Claims
	24		Sampling

Page 2 3 4 8 12 16 18
Introduction Wear and Oil sampling Oil sample Oil cleaning Basic filtration Installation dear in oil analysis methods definitions methods

#### Introduction

systems

Maintenance is the largest single controllable expense in a manufacturing plant. With as many as 80% of all machine failures related to contamination in the oil, pro-active methods are saving industries considerable costs every year.

This booklet offers an introduction to the problems with insufficient oil cleanliness, the causes and the remedy of the problems. All the information presented is generally known and accepted. It was compiled and published by people within the company C.C. Jensen A/S. We invite you to take advantage of the experience we have gathered over the past 50 years with oil maintenance within various types of industrial and marine applications. The perfect oil cleaning system will control the level of all types of contamination. For further information, we recommend that you visit <a href="https://www.cjc.dk">www.cjc.dk</a> or <a href="https://www.cjensen.com">www.ccjensen.com</a>, where you can also order a CJC Oil Sampling Kit including materials and instructions for sampling your oil.

# Wear and tear in oil systems


Any machine using oil for power transmission or lubrication will be affected by the condition of the oil.

The oil comes into contact with all the other components in the system and should be considered the most important. Contamination in the oil is anything that should not be there, like solids and chemicals.

#### Mechanical Wear

Solid particles typically cause 50% of all failures and multiply by destroying the surface of even very hard metal. The most

Fig. 1

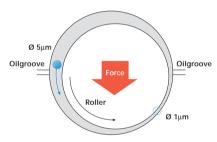

Source: Västeras PetroleumKemi AB

harmful particles are the ones trapped in the dynamic tolerance like in bearings (figure 1).

#### **Chemical Wear**

Chemical contamination includes water and oxidation products and certain metals (e.g. copper). Water typically accounts for 20% of mechanical failures. It reduces the lubricity of the oil and results in

corrosion and erosion leading to spalding (figure 2). Furthermore, it acts as a catalyst in the oxidation of the oil, just as copper does. Oxidation products form a sticky layer on metal surfaces and is often referred to as varnish. Hard particles of all sizes get caught in the sticky layer, creating a sandpaper like, grinding surface.

Fig. 2



Page 2 3 4 8 12 16 18
Introduction Wear and tear in oil systems

1 2 3 4 5 6

Oil sampling Oil sample Oil cleaning Basic filtration Installation methods definitions methods

#### Oil sampling

The purpose of oil sampling is to achieve the highest level of machine


performance and reliability at the lowest possible cost. The initial samples serve to establish benchmarks and to identify the machines with critical levels. The routine sampling is done to document that goals are met and can also provide indication of abnormal wear that needs to be addressed.

The quality of analysis results depends first on correct sampling and handling of the sample, secondly on the quality of the laboratory performing the analysis. The importance of the knowledge about where and how to take a sample is paramount and requires special attention.

#### Where to take an oil sample

Referring to figure 3 derive the oil from a preferably upwards pointing pipe with continuous and ample flow to produce a representative sample. Sampling points fitted on the lower perimeter of a pipe tend to allow depositing of particles in the sampling valve.

Fig. 3: Pipe cross section with sampling valves



Source: Västeras PetroleumKemi AB

The best sampling point is between the pump and the filter housing of an off-line filter, which is normally the worst contaminated part of the oil system. A satisfying result from such a sample is the best guarantee. If no off-line filter system is installed a vacuum type sampling pump is a valid option. In such case the sample should be drawn 10 cm (4 inches) off the lowest part of the tank (see page 7).


#### How to take an oil sample

- between the pump and the filter

To take an oil sample, the following is required:

- a 200 mL particle free glass bottle
- · a cloth
- a five litre (1 1/2 US gallon), open oil container Please read the following instructions carefully before taking the oil sample.

Fig. 4: Oil sampling

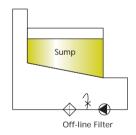

Steps 1-3



Steps 4-5



Step 6



- 1. Place the oil container beneath the sampling valve
- 2. Open and close the valve five times and leave it open.
- 3. Flush the pipe by draining one litre (one US quart) into the container.
- 4. Open the sample bottle.
- 5. Place the bottle under the oil flow without touching the sampling valve

		1	2	3	4	5	6
Page	2 Introduction	3 Wear and tear in oil systems	4 Oil sampling	8 Oil sample analysis	12 Oil cleaning methods	16 Basic filtration definitions	18 Installation methods

- 6. Fill the bottle approximately 80% full.
- 7. Place the cap on the bottle immediately after taking the sample.
- 8. Close the sampling valve.
- 9. All samples must be clearly marked with number, place of sampling, date and oil type/make (see below example).



If certified clean sample bottles are not available you may use sample bottles that are not certified, performing the following method.

- 1-2. As above
- 3. Empty the content into the container.
- 4. Perform this procedure three times.


Continue with points 5 to 9 as above

Samples should only be collected with the machine operating at normal working temperature. When sampling for particle counting the method is very important. Remember that you can never make a sample any better (cleaner) than the oil in the system, but it is easy to make it worse

#### - using a manual vacuum pump

Follow the instructions that came with the pump kit. The illustrations below show the CJC oil sampling kit.

Fig. 5: Oil sampling with a vacuum pump.

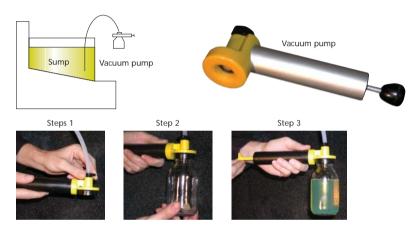

Try to lower the free end of the plastic tube to one third above the bottom of the tank in the center of the tank – or, if relevant, above the lowest point of the tank. Be careful not to touch the walls or the bottom of the reservoir with the tube. When you have sealed the bottle, make sure that the label is filled in with all the information as per example on page 6.



#### Oil sample analysis

As a minimum an oil analysis should include:

- a particle count
- water content in ppm

· viscosity

acidity level

If the oil additive content is of interest a spectral analysis should be included. This test is best carried out by the oil supplier as they have the detailed knowledge of the initial additivation of the oil.

It is recommended that the initial tests are performed by an independent laboratory with special knowledge on lubricants.

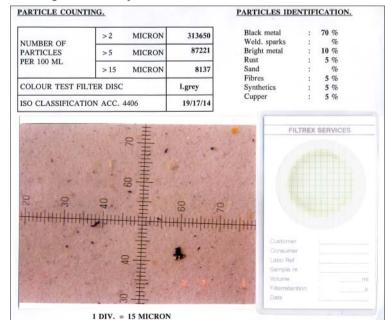


Fig. 6: Particle analysis

Source: Filtrex Services BV, Holland

Page 20 Economy

21 Ordering a filtration system

22 Handling of oil and oil Systems

10 23 Recommendations for buying oil Oil sample analysis

#### ISO Standards

The ISO 4406/2000 classification of particle contents was introduced to facilitate comparisons in particle counting.

Sudden break down in an oil system is often caused by large particles (>14  $\mu$ m) in the oil while slower, progressive faults, e.g. wear and tear, are caused by the smaller particles (4-6  $\mu$ m).

This is one of the explanations why the particle reference sizes were set to 4  $\mu$ m, 6  $\mu$ m and 14  $\mu$ m in ISO 4406/2000. A typical sample from a wind turbine gearbox, for example, contains in every 100 mL of oil:

450,000 particles >4 micron 120,000 particles >6 micron 14,000 particles >14 micron

Introduced in the ISO classification table (on the right), this oil sample has a contamination class of 19/17/14.

Fig. 7: Contamination classes according to the new ISO 4406/2000 standard.

	More than	Till	Class
	8.000.000	16.000.000	24
	4.000.000	8.000.000	23
	2.000.000	4.000.000	22
	1.000.000	2.000.000	21
	500.000	1.000.000	20
ř	250.000	500.000	19
	130.000	250.000	18
l۲	64.000	130.000	17
Ш	32.000	64.000	16
Ш	16.000	32.000	15
	8.000	16.000	14
	4.000	8.000	13
	2.000	4.000	12
	1.000	2.000	11
	500	1.000	10
	250	500	9
e	130	250	8
	64	130	7
	32	64	6

Max. number of particles per 100 ml fluid after their size ranges

		1	2	3	4	5	0
Page	2 Introduction	3 Wear and tear in oil systems	4 Oil sampling	8 Oil sample analysis	12 Oil cleaning methods	16 Basic filtration definitions	18 Installation methods

#### **NAS Classes**

NAS 1628 is a American standard that translates approximately into ISO Codes. The difference is that the NAS gives a more detailed breakdown of the different particle sizes.

Fig. 8: NAS 1628														
Size	Classes NAS 1628													
μ	00	0	1	2	3	4	5	6	7	8	9	10	11	12
5-15	125	250	500	1.000	2.000	4.000	8.000	16.000	32.000	64.000	128.000	256.000	512.000	1.024.000
15-25	22	44	89	178	356	712	1425	2.850	5.700	11.400	22.800	45.600	91.200	182.400
25-50	4	8	16	32	63	126	253	506	1.012	2.025	4.050	8.100	16.200	32.400
50-100	1	2	3	6	11	22	45	90	180	360	720	1.440	2.880	5.760
>100	0	0	1	1	2	4	8	16	32	64	128	256	512	1.024

#### **Evaluation of particle count**

The obtained ISO code is an indication of the cleanliness of the oil in the gearbox and can be verified in the contamination charts shown below.

Fig. Oc. Contomination	and do for	budgardia and	luba all avatama
Fig. 9a: Contamination	aurae ror	nvoraunc and	lube on systems

ISO Code	Description	Suitable for	*
ISO 14/12/10	Very clean oil	All oil systems	8,5 kg
ISO 16/14/11	Clean oil	Servo & high pressure hydraulics	17 kg
ISO 17/15/12	Light contaminated oil	Standard hydraulic and lube oil systems	34 kg
ISO 19/17/14	New oil	Medium to low pressure systems	140 kg
ISO 22/20/17	Very contaminated oil	Not suitable for oil systems	> 589 kg

Fig. 9b: Contamination guide for gears

ISO Code	Description		Improvemen Factor	t *
ISO 14/12/10	Very clean oil	All systems	200%	8,5 kg
ISO 16/14/11	Clean oil	Critical gear system	150%	17 kg
ISO 17/15/12	Light contaminated oil	Standard gear systems	100%	34 kg
ISO 19/17/14	New oil	Non critical gear systems	75%	140 kg
ISO 22/20/17	Very contaminated oil	Not suitable for gear system	s 50%	> 589 kg


<sup>\*</sup> kg of solid particles passing the system pump yearly at the given ISO code.



3 Oil sample analysis

For every oil-filled system, a cleanliness goal should be specified. This is the basic requirement to insure reliability at the lowest possible cost.

Fig. 10: Test membranes together with microscopic photographs of various contamination levels

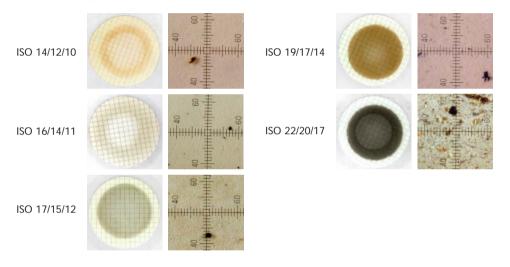

#### Frequency of analysis

In the implementation phase of a condition monitoring system, analyses must be made frequently – at least every six months – in order to establish a knowledge data base.

Every oil system should have a log where analysis results are registered, The logbook must also contain information about oil type, oil changes, break-downs, targeted ISO class code and oil analysis results.

			2	3	4	5	6
Page	2 Introduction	3 Wear and tear in oil systems	4 Oil sampling	8 Oil sample analysis	12 Oil cleaning methods	16 Basic filtration definitions	18 Installation methods

## Oil cleaning methods

Several oil cleaning methods are available:

Fig. 11: Oil cleaning methods

Method	Cleaning action
Conventional surface filter	Reduces the content of solid particles.
Cellulose-based depth filter	Reduces the content of solid particles, water and resin
Electrostatic filters	Reduces the content of polar contaminants
Centrifugal separator	Reduces the content of particles with a density higher than that of oil
Vacuum filter	Reduces the content of air and water

All the above technologies are commercially available. The surface filter and the depth filter however, are often preferred due to their superior effeciency and economy.

Both these cleaning techniques work best under constant conditions, i.e. steady flow and pressure. The depth filter is often placed in a separate off-line circuit and with such stable conditions, it retains the majority of contaminants in the oil. The surface filter could be installed in an oil cooling circuit or as a full-flow "emergency" filter in the pressure (upstream) line of the oil system.

#### Filter types

The Depth Filter is like a maze where the oil passes through several layers of cellulose. The largest particles are retained on the outside of the element whereas the smaller particles enter the element and are retained within the filter material.

Page 20 Economy 8 21 Ordering a filtration system

22 Handling of oil and oil Systems

23 Recommendations for buying oil



ensuring a high dirt holding capacity. Using a cellulose element also enables removal of water (absorption) and oxidation residuals; resins/varnish (adsorption). This type of filter can also be installed in a by-pass circuit, using the pressure of the system pump.

The Surface Filters of conventional designs have relatively thin layers of filter media, allowing high flows through the element. The filter element is pleated in order to increase the surface area and reduce the pressure drop. The filter is capable of removing solid particles only – and as it utilizes only the surface area, it has a restricted dirt holding capacity.


See illustrations on pages 14 & 15.

Modern oil systems often combine the two cleaning systems, where the depth filter removes the contamination and the surface filter serves as security filter.

2 3 4 5 6 18 Page 12 Introduction Wear and Oil sampling Oil sample Oil cleaning Basic filtration Installation tear in oil analysis methods definitions methods

#### **Surface Filter**

systems

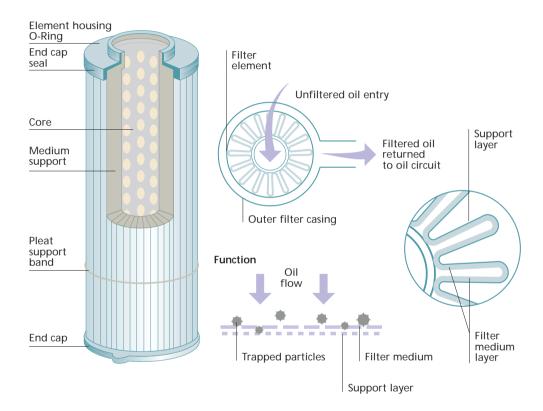

Surface filters have a limited contamination holding capacity, usually between 1 and 100 grams, which makes filter insert replacement at short intervals necessary in order to ensure efficient filtration.

Surface filters removing particles <20 µm ensure effective protection when installed before an important machine part.


Surface filters do not absorb water.

Surface filters do not remove oxidation residual deposits.

Page 20 Economy 8 21 Ordering a filtration system

22 Handling of oil and oil Systems 23 Recommendations for buying oil Oil cleaning methods


#### **Depth Filter**

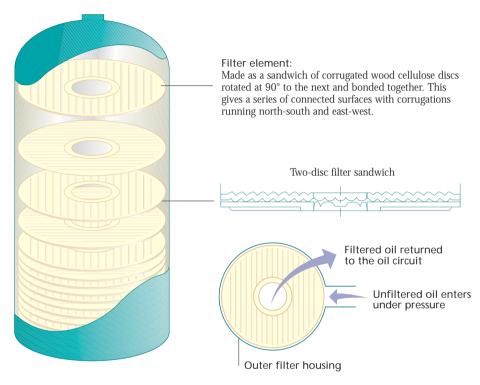

The CJCTM depth filter has a contamination holding capacity of approximately 2 L and only needs replacing every 12 months.

Depth filters filter effectively down to 3  $\mu m$  absolute.

Depth filters absorb water and resins (oxidation residuals)



### Basic filtration definitions

#### Nominal filtration

Signifies that the filter removes 50% of the particles larger than a given size. There is no standard for this, so

consequently, different products/makes cannot be compared.

#### Absolute filtration

This is a measure for the pore size in a filter and indicates the largest spherical particle that can pass through the filter. The rating of a depth filter is often 3 mm absolute or better. The rating of a surface filter varies according to the requirements of the component(s) to be protected.

#### Bx value

The  $\beta$  value is a measure for the filter efficiency: The "x" indicates the particle size in question and  $\beta$  ("beta") is the efficiency.

The  $\beta$  value is calculated by the following formula:

$$\beta x = \frac{number\ of\ particles\ upstream > x\ (N_U)}{number\ of\ particles\ downstream > x\ (N_D)}$$

Fig. 12: Multipass test

#### Contaminant



Page 20 21 Economy Ordering a filtration system

22 Handling of oil and oil Systems 23 Recommendations for buying oil



#### Dirt capacity

Dirt capacity is the quantity of contamination absorbed by the element when the saturation pressure is reached. This is measured in weight or volume.

#### Filter by-pass valve

The filter by-pass valve eliminates the filtration function by by-passing the full flow filter, e.g. a by-pass valve opens when the pressure drop over the filter is too high. The oil flow then completely or partially passes by – and not through – the filter. A leaking by-pass vale has a devastating effect on the filter efficiency value. For off-line filters, the by-pass valve should be in the pump, connecting the pressure and suction ports.

Fig. 13: By-pass valve



tear in oil

systems

4

Oil system diagram

#### Installation methods

#### **Full-flow filtration**


The total system flow passes through the filter. Only surface filter elements are applicable here.

#### Off-line filtration

An installation method where the filtration unit operates in a separate cleaning circuit, enabling the use of depth filter elements.

7 Page 20 Economy 8 21 Ordering a filtration system 9 22 Handling of oil and oil Systems

23 Recommendations for buying oil Installation methods

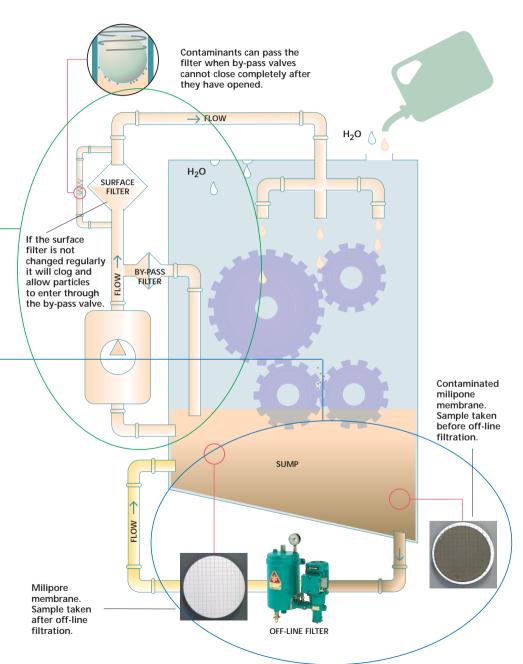

		1	2	3	4	5	0
Page	2 Introduction	3 Wear and tear in oil systems	4 Oil sampling	8 Oil sample analysis	12 Oil cleaning methods	16 Basic filtration definitions	18 Installation methods

#### **Economy**

Before investing in a filtration system, a cost benefit study should be carried out. The involved costs can be divided into two groups:

- Purchase costs: costs directly related to the purchase of a filtration system, i.e. purchase price and installation costs.
- **Operational costs:** costs for keeping the filtration system/unit in operation, i.e. replacement of filter inserts, energy consumption and repairs.

Purchase Costs + Operational Costs = Total Investment

The total investment has to be lower than the savings obtained through clean oil.

• **Savings:** the reductions in maintenance costs, the minimizing of lost production hours, prolonged service intervals, longer oil life time, extended component life, etc.

For a CJC off-line filter, for example on a wind turbine, the payback period is approximately three days of operation. This means that if the improved oil condition leads to just 3 x 24 hours of additional production, the filter unit has paid for itself.

7 10 20 22 23 Page Economy Ordering Handling Recommena filtration of oil and oil dations for system Systems buying oil

Ordering a filtration system

# Ordering a filtration system

When ordering a filtration system the following should be specified:

- Operational costs of the filter.
- Required fluid system cleanliness level
- Control procedure confirming that the cleanliness level has been achieved.

Calculate the total cost for the life time of the system – or 10 years of operation.



# Handling of oil and oil systems

#### New oil in containers

- New oil should be considered contaminated until a sample has been analyzed.
- Oils containing additives that are not necessary for the application are to be considered contaminated
- New oil should always be introduced to the system via a filter, preferably a 3 µm absolute filter.
- Do not mix oils without previously investigating compatibility.
- Keep lubricating products in closed containers to avoid ingress of contaminants.

#### Oil in the system

- Observe the oil regularly during operation in order to discover any sudden appearance of water, air or other contaminants.
   Using fresh oil as a reference may be helpful.
- Check the oil after machine malfunctions or other incidents which might affect the oil.
- Always observe maximum cleanliness and accuracy during sampling.
- Systems should be as sealed as possible. All permanent openings should be equipped with venting filters. All systems should be equipped with permanent filter installations.
- When changing the oil, the tank and the system should be emptied completely and the tank should be cleaned manually of settlings (sludge, etc.).
- When replacing seals, only oil-resistant materials should be used. Compatibility with the oil should be checked.
- Never apply new additives without consulting the oil supplier/consultant. Ask for written confirmation of the measures to be taken.
- Always use independent analysis resources with adequate quality control.

 Page
 20
 21
 22
 23

 Economy
 Ordering a filtration system
 Handling of oil and oil dations for buying oil

Handling of oil and oil systems

Recommendations for buying oil

# Recommendations for buying oil

When buying oil in bulk, buyers have a right to set special certified requirements to ensure the quality.

Below find some **examples of requirements** and test for the quality of the oil, emphasizing oil cleanliness.

#### Oil test certificates and test sampling

The results of an oil test of the batch should be presented to the buyer. A sample should be taken during the filling of the first batch. Samples should be marked with the trademark, batch number and size of the consignment. The oil should be analyzed by an independent laboratory and the analysis should include the data described in the oil analysis section of this booklet.

#### Claims

If the oil supplied does not fulfill requirements, returning the consignment might be considered. If the problem can be corrected, new samples must be approved. The supplier must pay all costs, including machinery failure and downtime.

		1	2	3	4	5	6
Page	2 Introduction	3 Wear and tear in oil systems	4 Oil sampling	8 Oil sample analysis	12 Oil cleaning methods	16 Basic filtration definitions	18 Installation methods

#### Sampling

Samples must be drawn from each manufactured batch. The analysed sample must be a representative sample of the manufactured batch. Test records must be available for the buyer for at least five years.

An analysis certificate must be delivered together with the ordered oil and include at least the following items:

- Visual inspection
- Viscosity @ 40°C
- Density
- Total Acid Number of finished product
- Air bubble separation time
- Contaminants, gravimetric.

For wind turbine oils, foaming at 50°C could be included.

The oil must be delivered by tanker trucks, epoxy-painted drums or 20-litre cans. The buyer must indicate the type of container for each individual case. The container must be of first class quality and the type generally used in the oil trade. The container must be marked with the buyer's trade description, the suppliers trade designation, net content and a continuous manufacturing batch number.

	7	8	9	10
Page	20 Economy	21 Ordering a filtration system	22 Handling of oil and oil Systems	23 Recommen- dations for buying oil









#### MarinE









#### DIESEL ENGINES



#### WIND POWER







Your local CJC™ distributor:



ADDING ENERGY

#### C.C. Jensen A/S

Løvholmen 13 · 5700 Svendborg · Denmark Tel. +45 63 21 20 14 · Fax +45 62 22 46 15 E-mail: filter@cjc.dk · www.cjc.dk